

# Korniche Upstand


## Installation Guide



## TOOLS / PARTS REQUIRED



Cordless  
Screwdriver

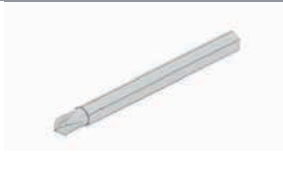

Crosshead Driver Bit



5mm x 100mm Screw  
(provided)



3.5mm x 45mm Screw  
(provided)



Spacer

## PACKAGING CONTENTS



**5mm x 100mm Screw**  
(provided)

USE ON FIXING POINTS  
MARKED IN RED



**3.5mm x 45mm Screw**  
(provided)

USE ON FIXING POINTS  
MARKED IN BLACK




Spacer X 1




Base Sections x 4



Upstand Widths x 2

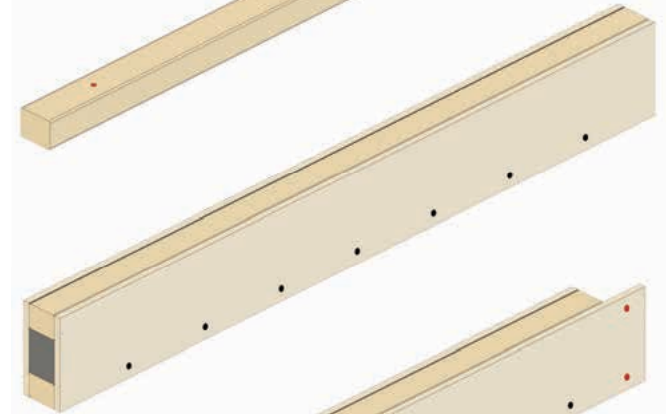


Upstand Lengths x 2

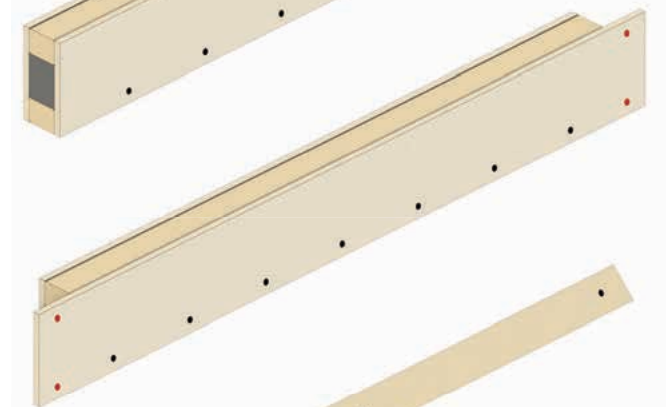

(Optional)  
Short Chamfered  
Batten x 2




(Optional)  
Long Chamfered  
Batten x 2


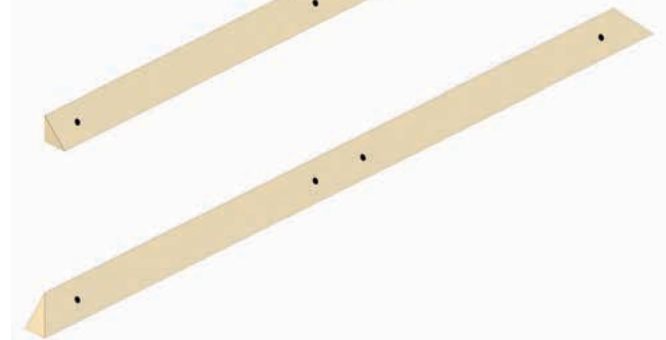


# FIT BOTTOM BASE RAILS


1

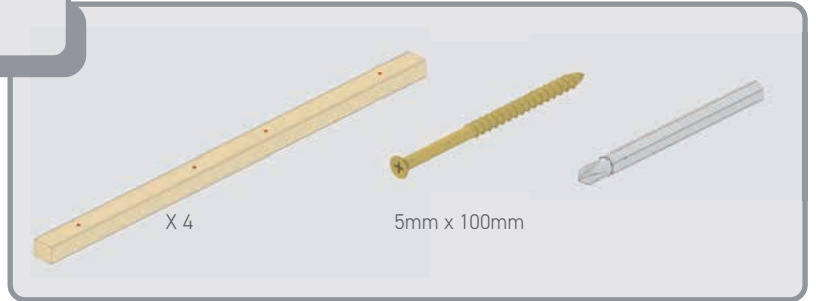


## Position bottom rail battens around structural opening

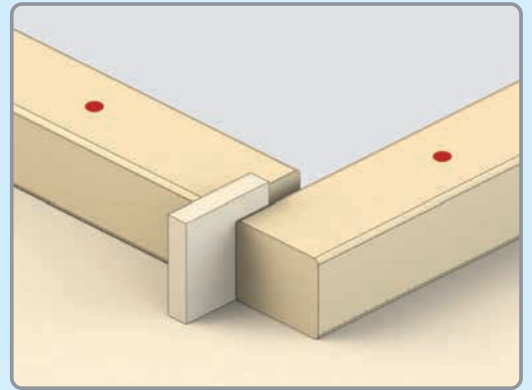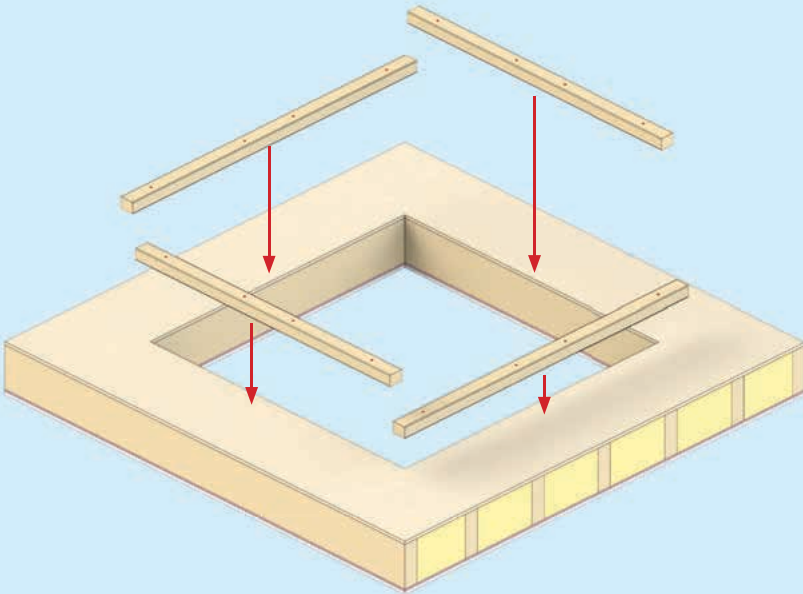

## Use Spacer to set to correct gaps

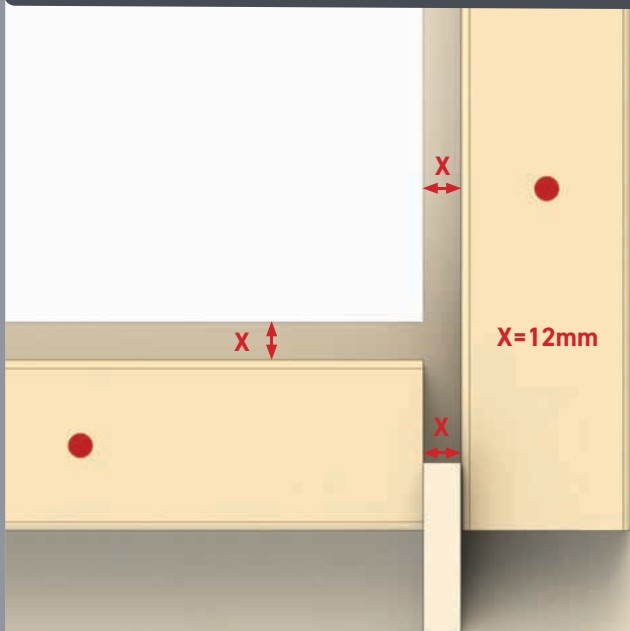

## Check diagonals

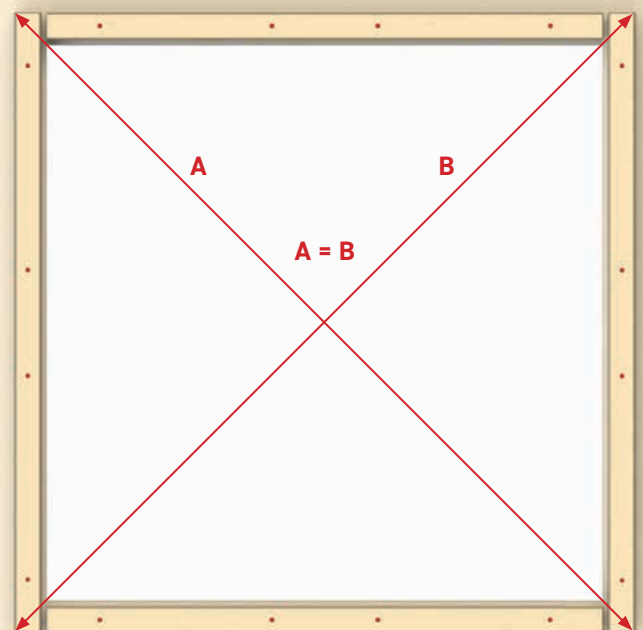




**5mm x 100mm Screw**  
(provided)



**USE ON FIXING POINTS  
MARKED IN RED**






centre

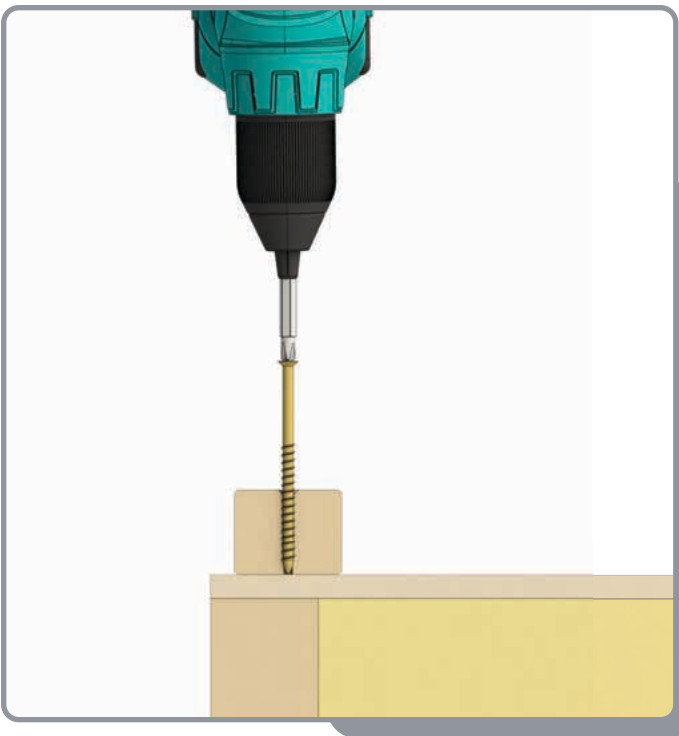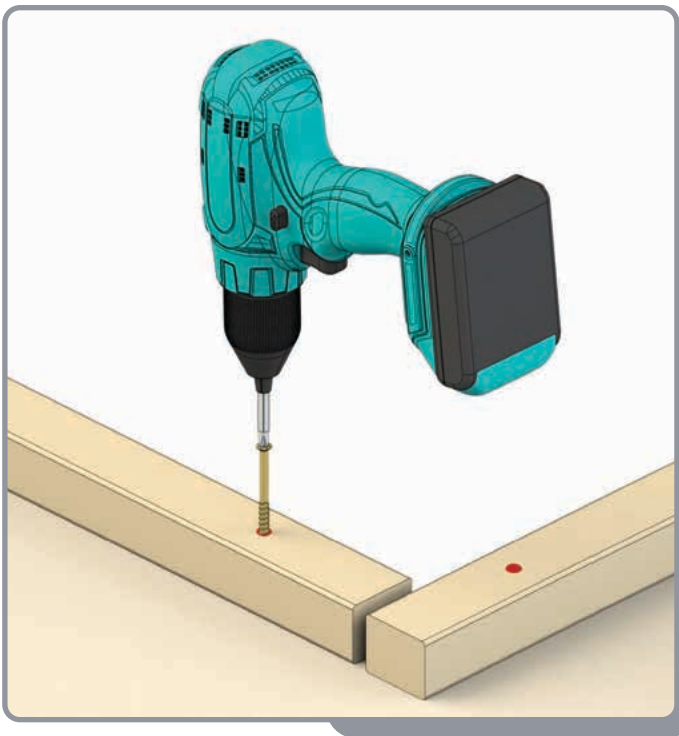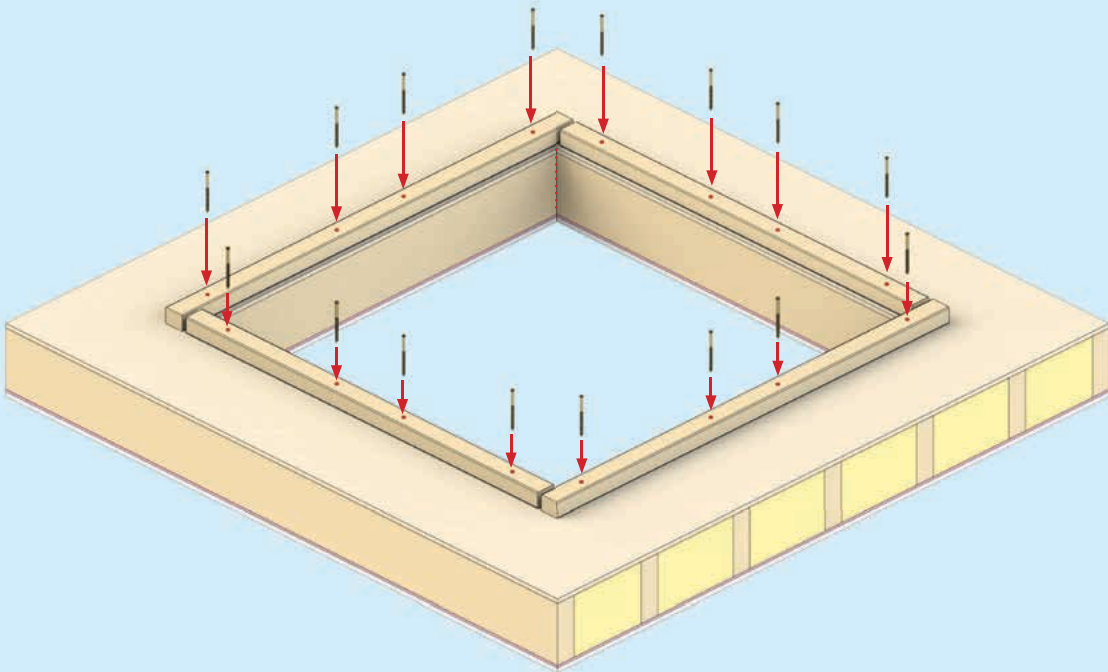


# FIT UPSTAND WIDTHS

2

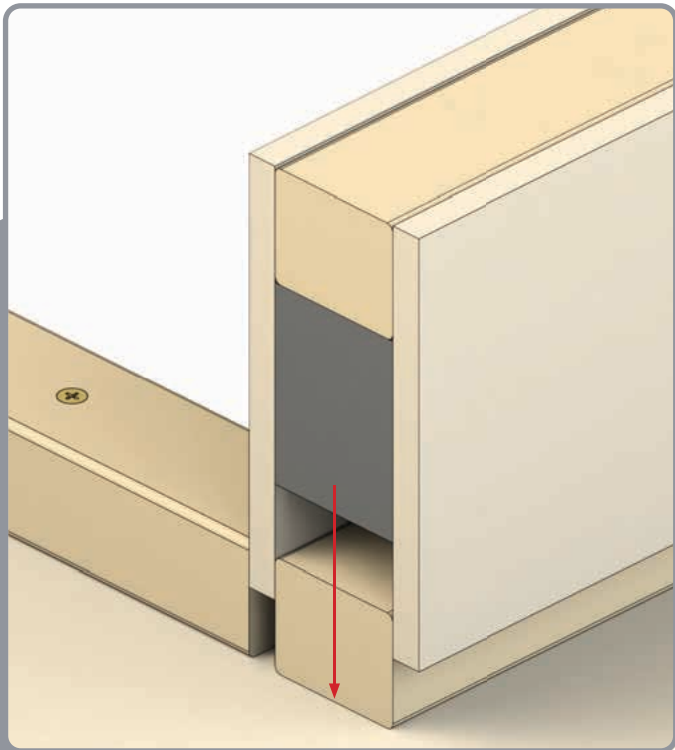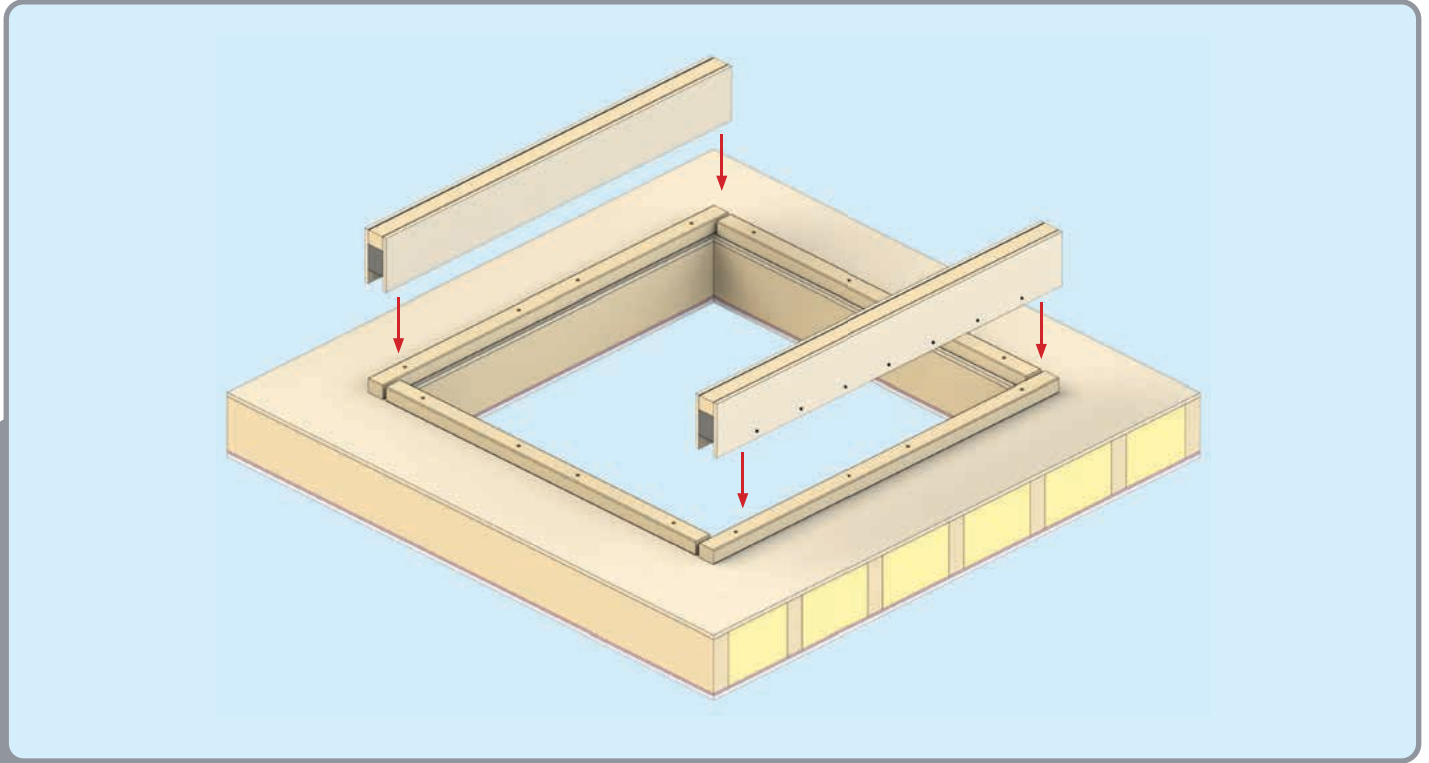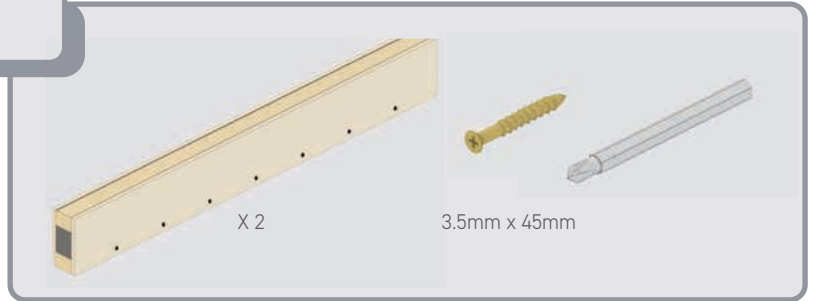




Ensure faces sit flush

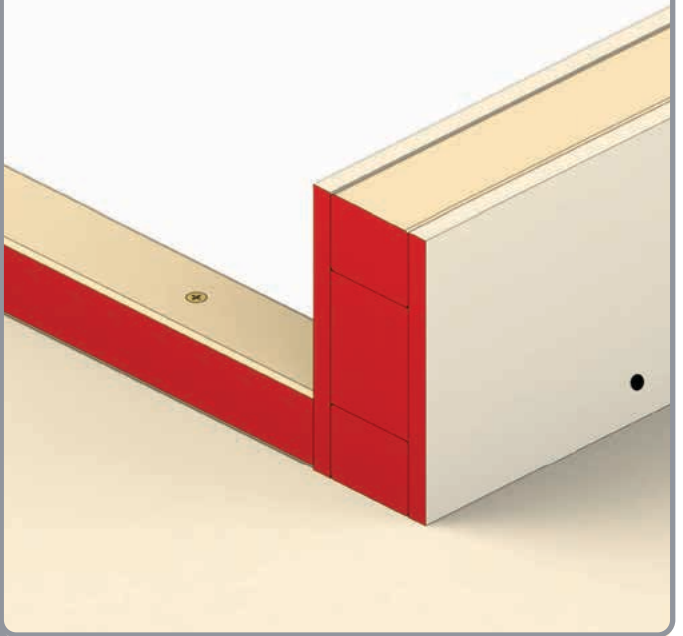





**3.5mm x 45mm Screw**  
(provided)

**USE ON FIXING POINTS  
MARKED IN BLACK**

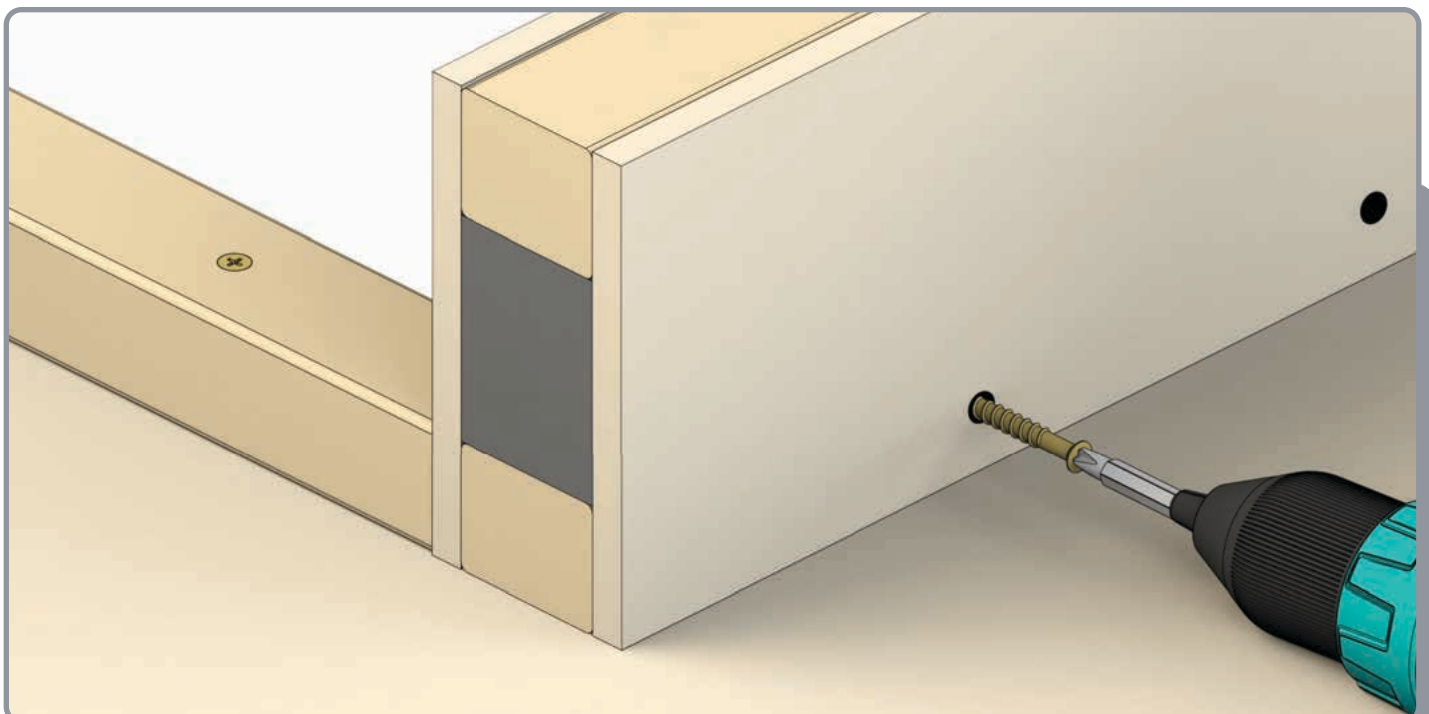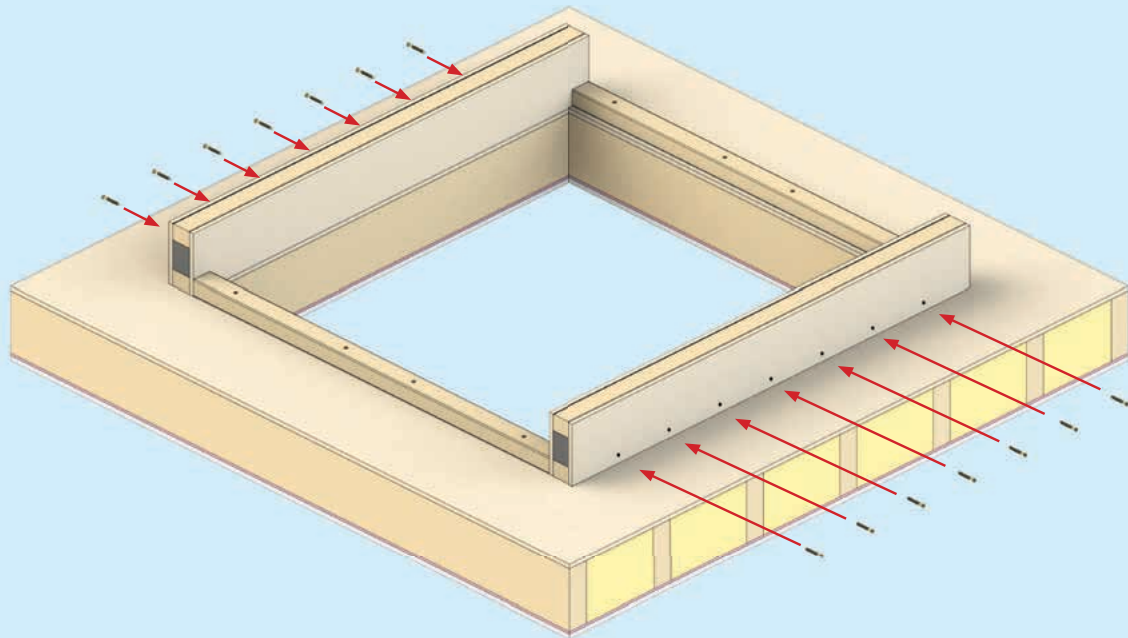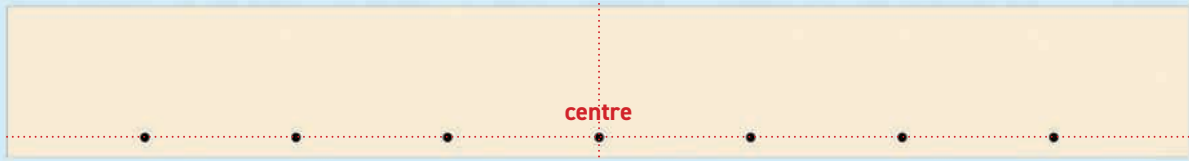


# FIT UPSTAND LENGTHS

3

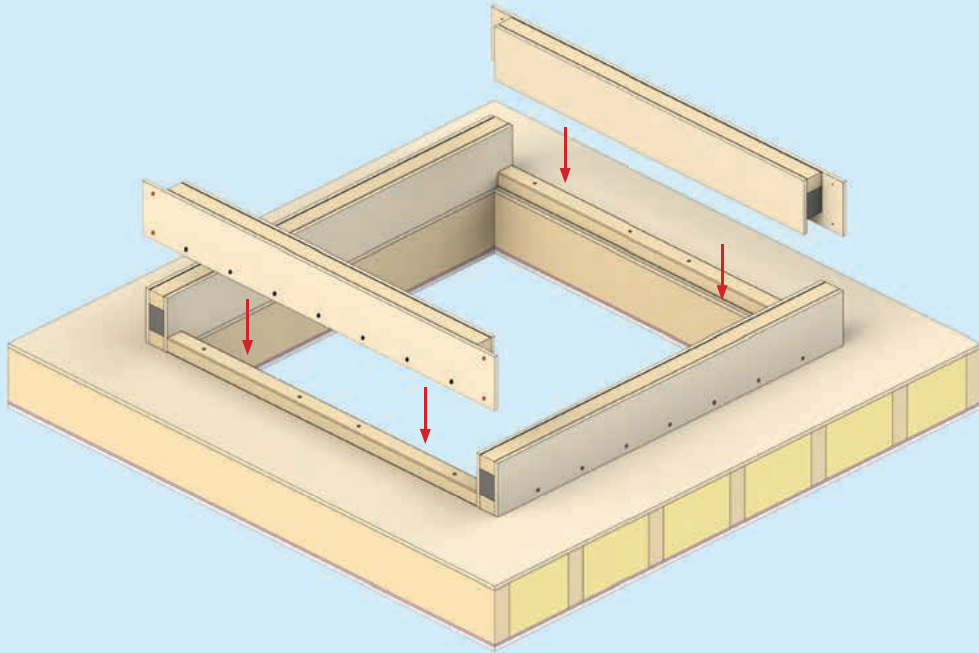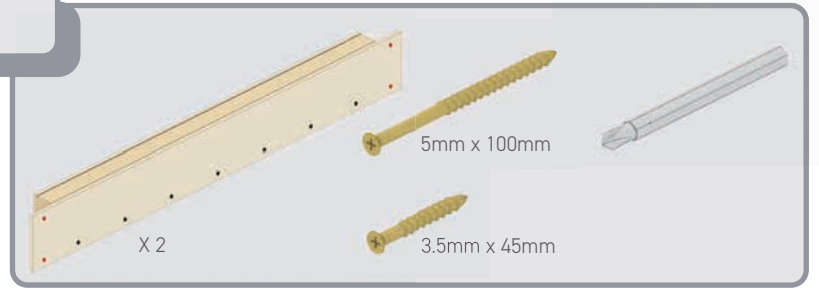



Ensure faces sit flush

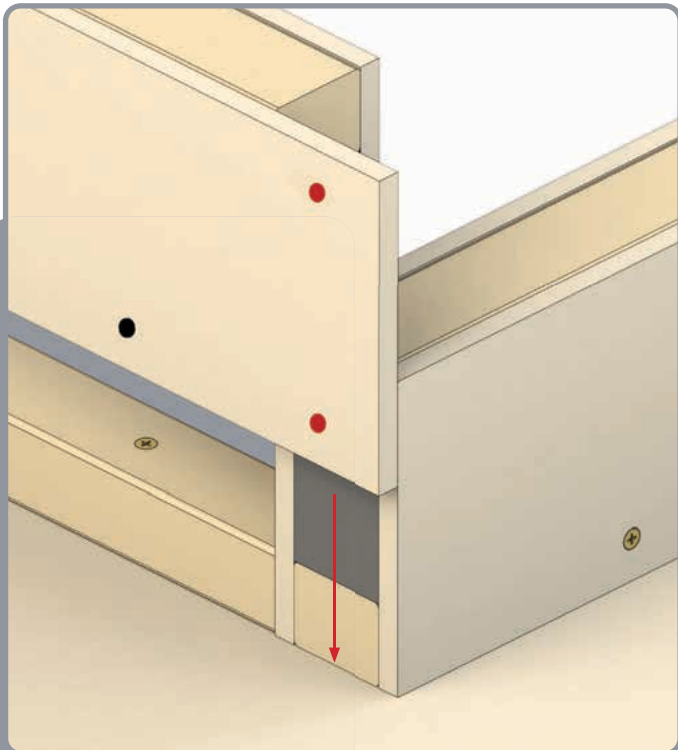



**3.5mm x 45mm Screw**  
(provided)




**USE ON FIXING POINTS  
MARKED IN BLACK**

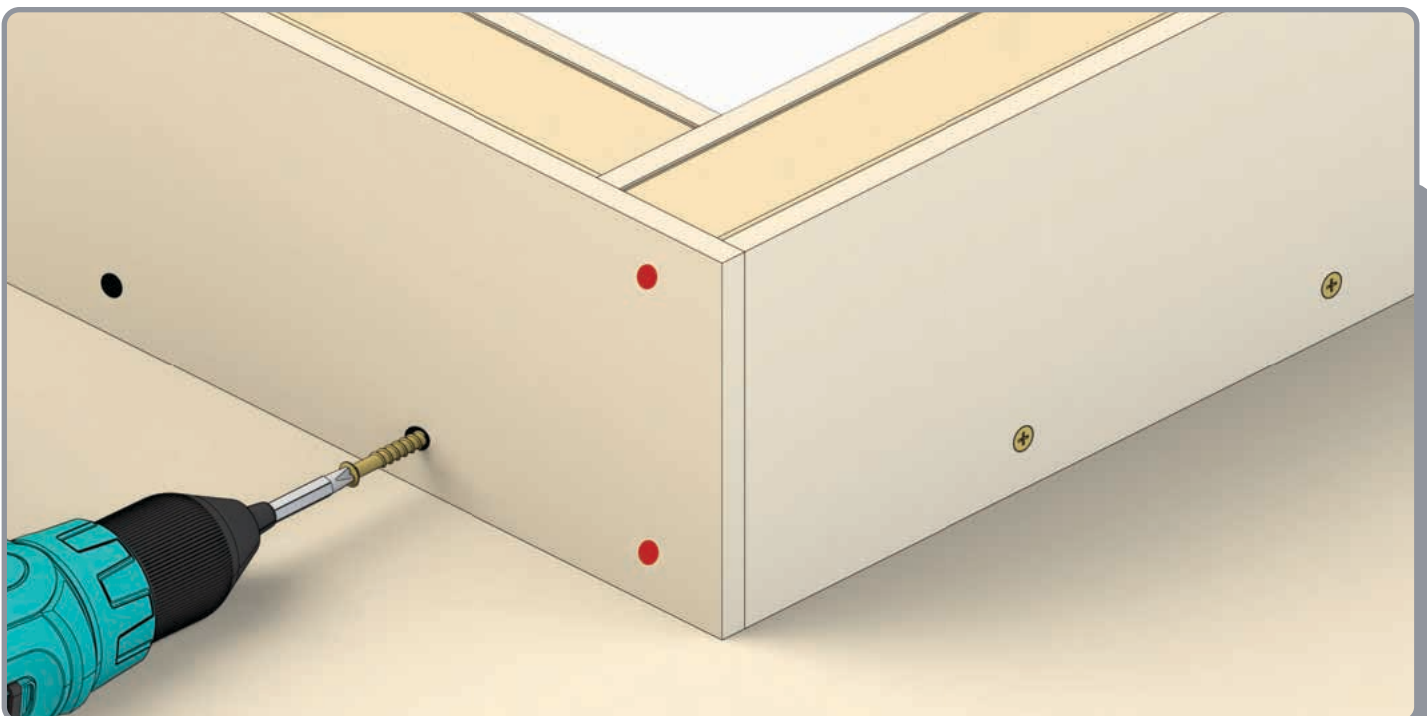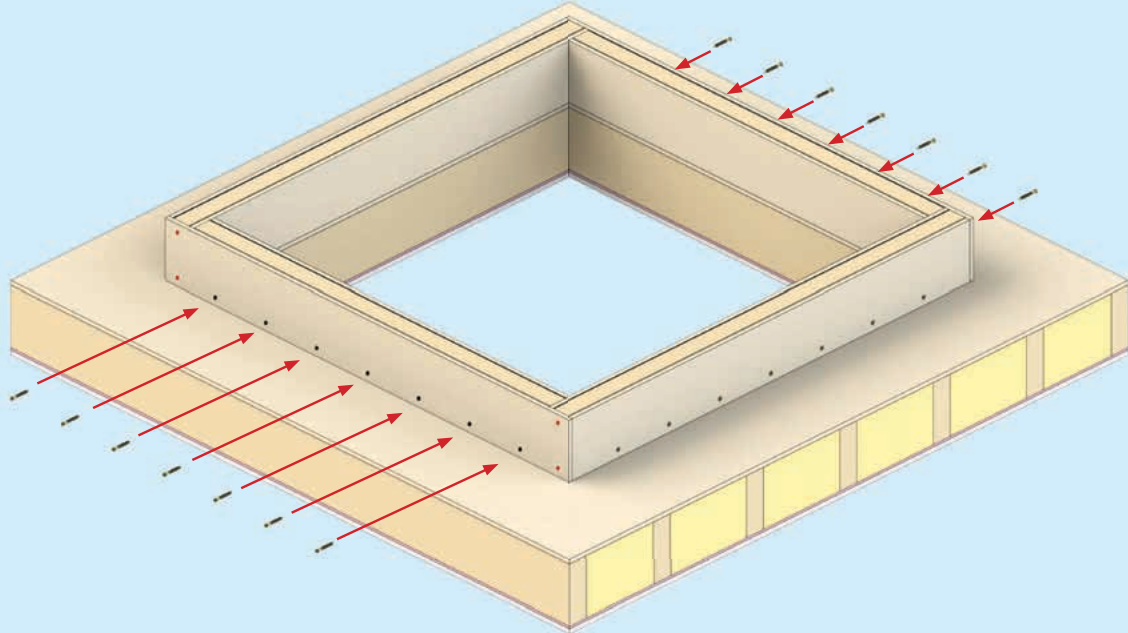



**5mm x 100mm Screw**  
(provided)

**USE ON FIXING POINTS  
MARKED IN RED**

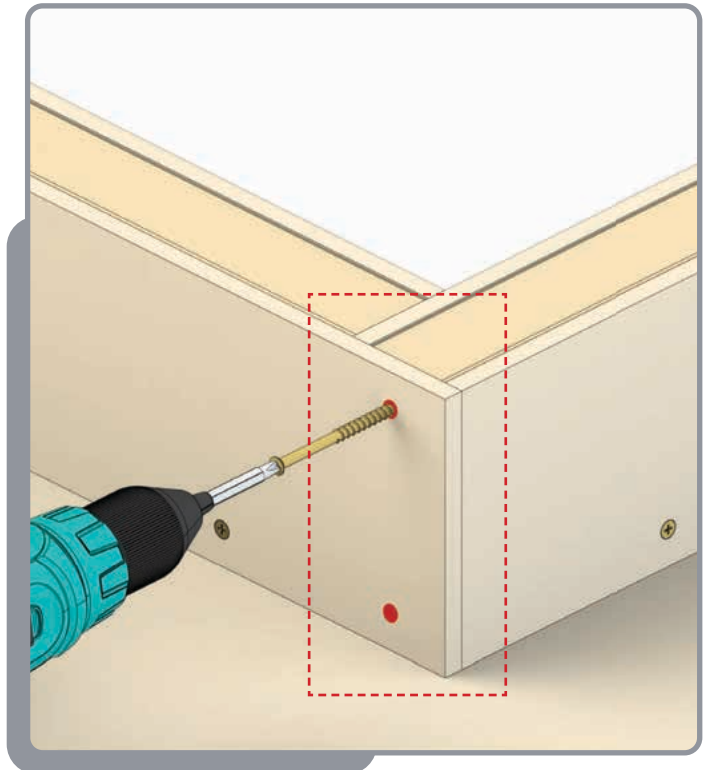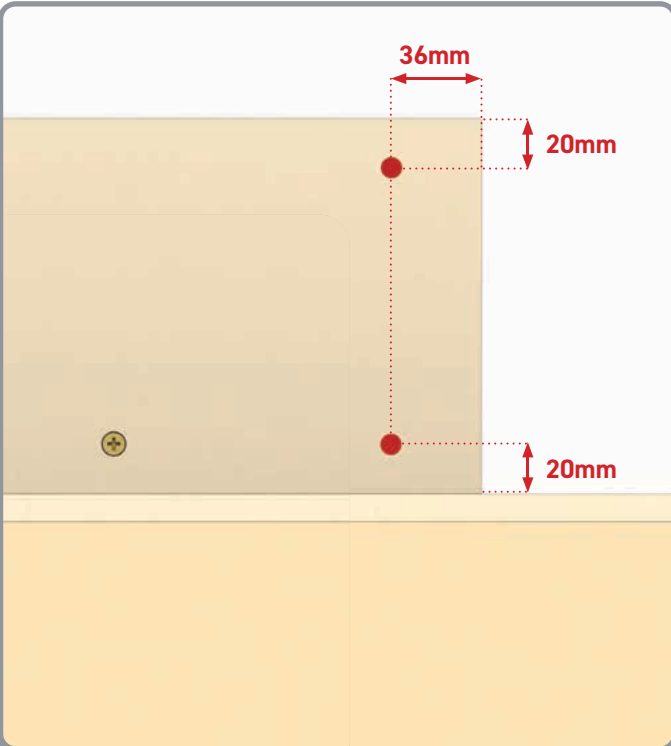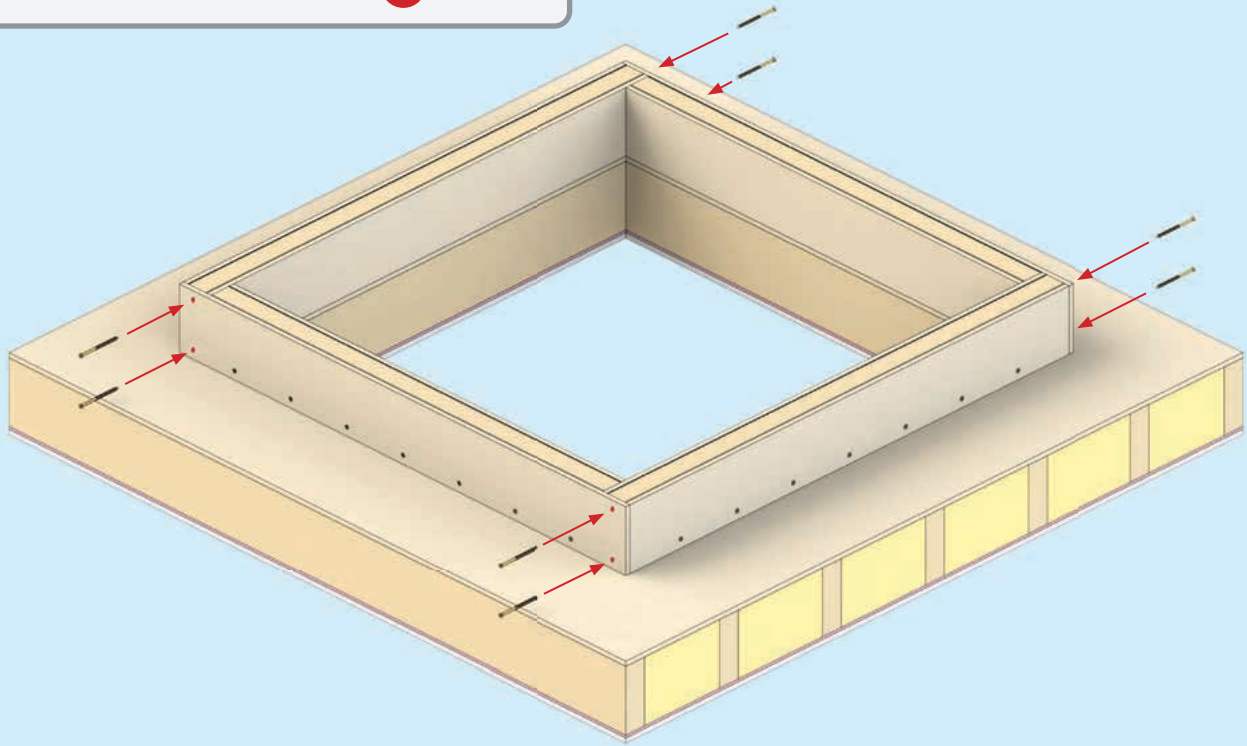


# OPTIONAL - FIT CHAMFERED BATTENS

4




## Position chamfered battens


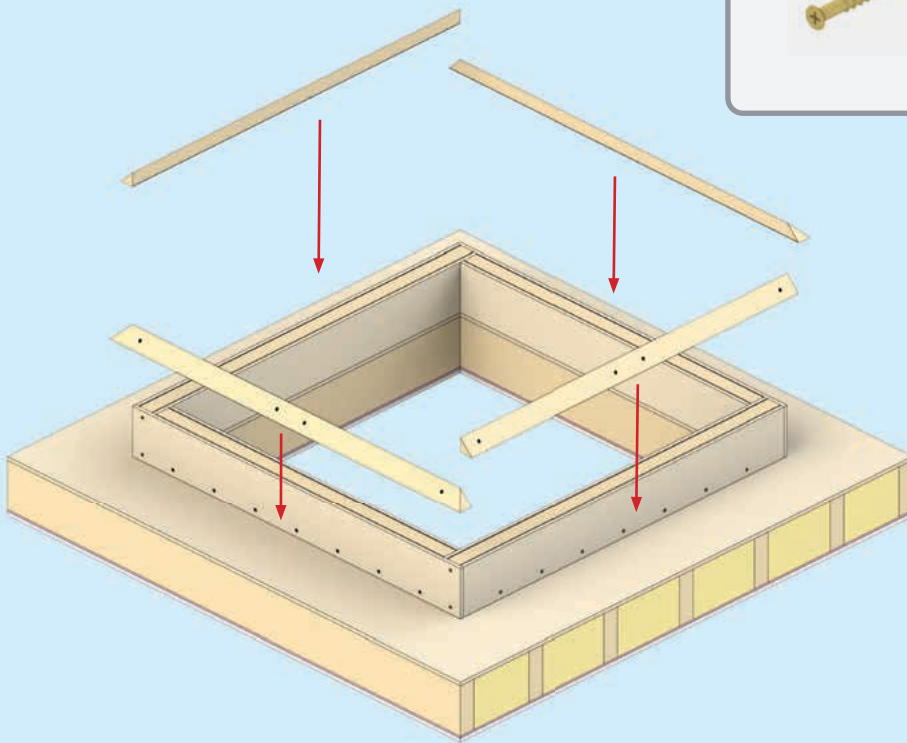


**3.5mm x 45mm Screw**  
(provided)

USE ON FIXING POINTS  
MARKED IN BLACK

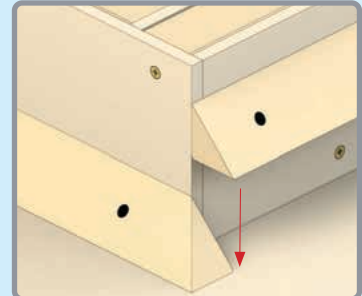

Ensure faces sit flush

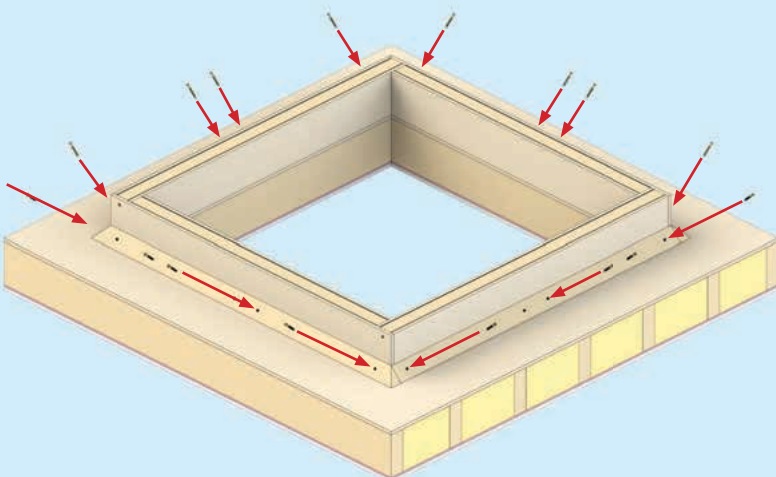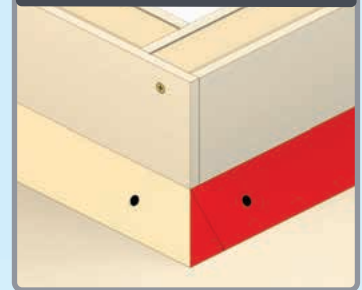



[www.korniche.co.uk](http://www.korniche.co.uk)